


REMOVAL (Radio, 2011 Wrangler)

WARNING: On vehicles equipped with airbags, (refer to electrical/restraints) before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury.


NOTE: For REQ radios, turn ignition to RUN and press the SET + SCAN buttons simultaneously to place the radio into transportation mode. The radio will display "Transportation" on the display within 5 seconds. If the radio is inoperative or not REQ, skip this step.

1. Disconnect the battery negative cable.
2. Remove the center bezel. ([Refer to 23 - Body/Instrument Panel/BEZEL, Instrument Panel - Removal](#)).
3. Remove the radio mounting fasteners.
4. Pull out the radio and disconnect the electrical and antenna connectors.
5. Remove the radio.

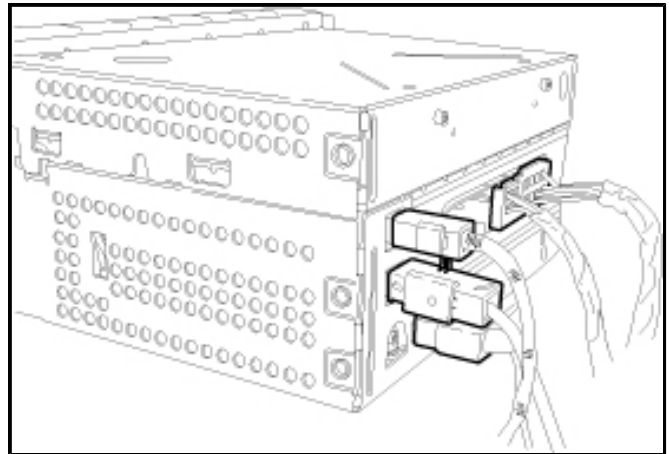


REMOVAL (Center bezel)

1. Remove the cluster bezel. ([Refer to 23 - Body/Instrument Panel/BEZEL, Instrument Cluster - Removal](#))
2. Using a trim stick C-4755 or equivalent, release the clips (2) and lower the center trim (1).
3. Disconnect the HVAC electrical connectors and remove the bezel. ([Refer to 24 - Heating and Air Conditioning/Controls/CONTROL, A/C and Heater - Removal](#))

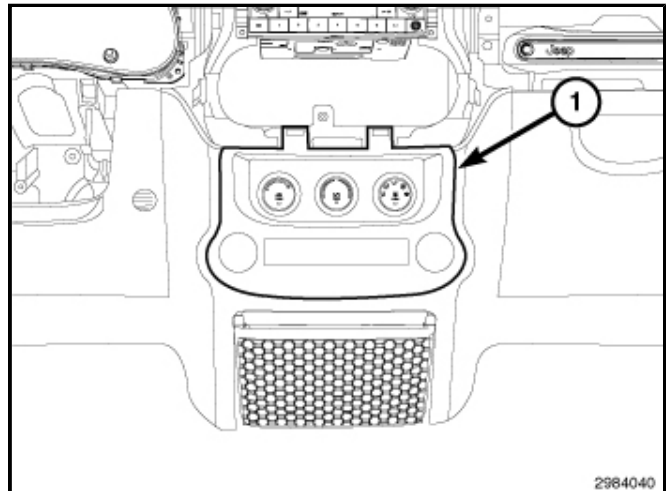


REMOVAL (c`i ghŷf bezel)

1. Position the steering wheel into the full down position.
2. Remove the steering column opening cover. ([Refer to 23 - Body/Instrument Panel/COVER, Steering Column Opening - Removal](#))

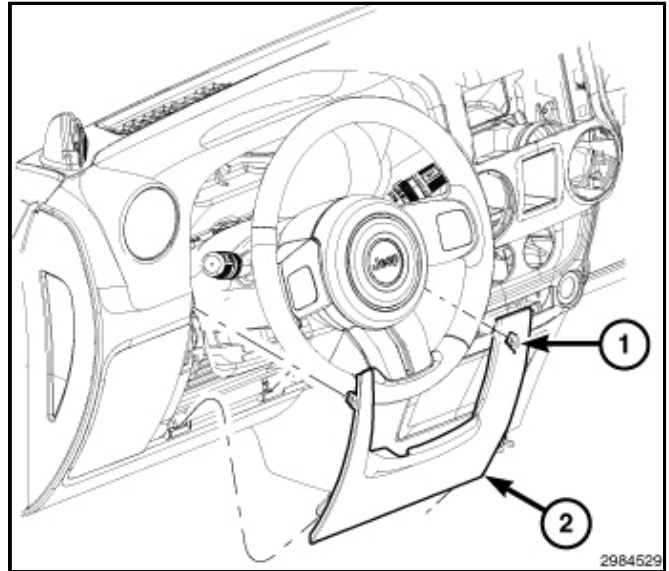


3. Remove the screws (2), release the 19 retaining clips (1) and remove the bezel (3).
4. Disconnect the power window switch electrical connector, if equipped.

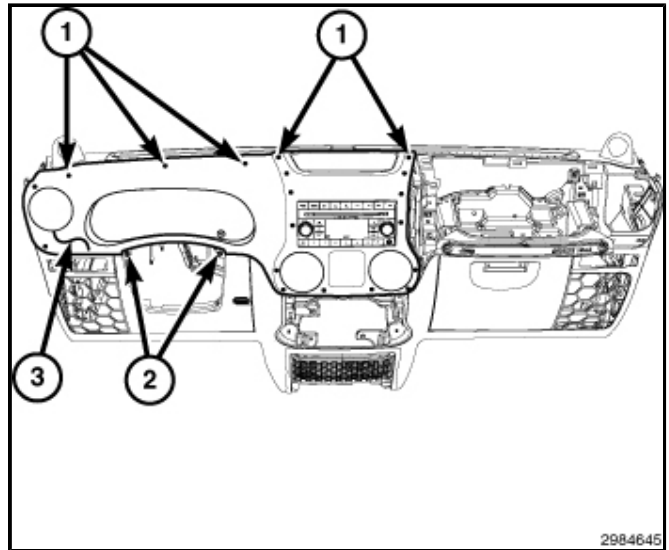


REMOVAL (steering column opening cover)

1. Using a trim stick C-4755 or equivalent, release the upper clips (1) and rotate the steering column opening cover (2) down and remove from lower tabs.

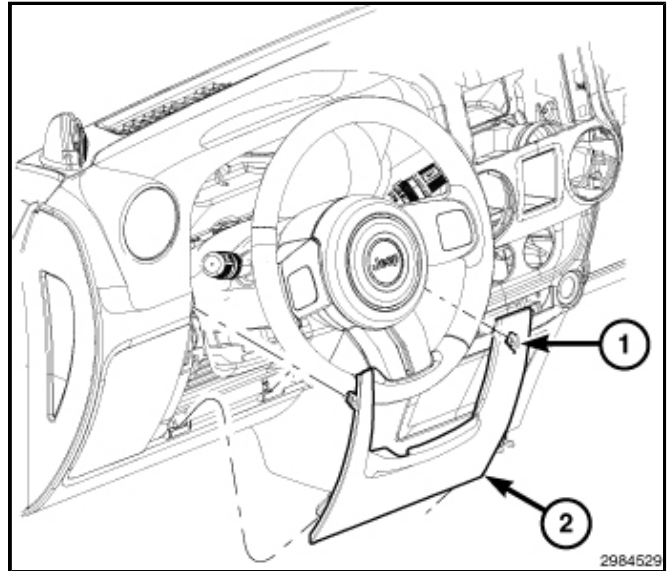

2. Remove the bolts (1) and remove the reinforcement plate (2).

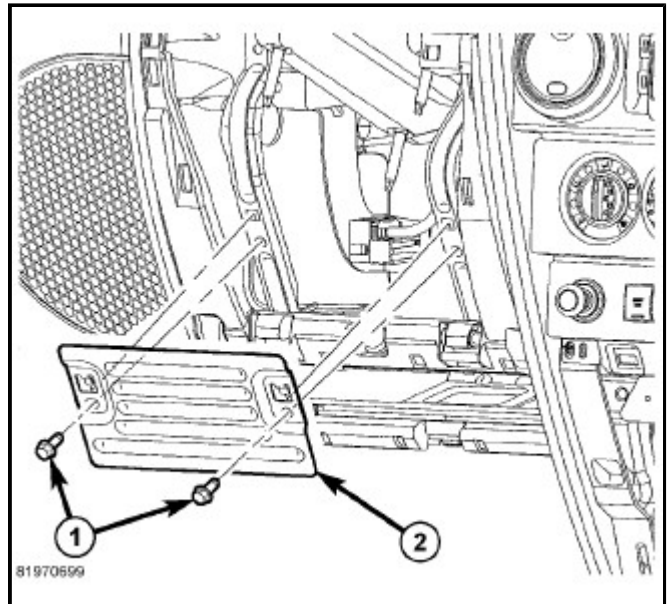

REMOVAL (HVAC bezel)

WARNING: Disable the airbag system before attempting any steering wheel, steering column or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.

NOTE: Take the proper precautions to protect the face of the center bezel from cosmetic damage while performing this procedure.

NOTE: ATC control shown. MTC control similar.

1. Disconnect and isolate the negative battery cable.
2. Remove the instrument panel center bezel (3) and place it on a workbench ([Refer to 23 - Body/Instrument Panel/BEZEL, Instrument Panel - Removal](#)).
3. Remove the four screws (2 and 4) that secure the A/C-heater control (1) to the back of the center bezel and remove the control.

