



Connector Part Information

- 12110626
- 8-Way F Metri-Pack 280 Series (GRY)

Pin	Wire Color	Circuit No.	Function
A	LT GRN/ BLK	1794	Rear Subwoofer Speaker Output (-)
B	DK BLU/ WHT	346	Rear Subwoofer Speaker Output (+)
C-D	--	--	Not Used
E	ORN	1940	Battery Positive Voltage
F	BLK	1850	Ground
G	DK GRN	1795	Right D Pillar Speaker Output (+)
H	LT BLU	315	Left D Pillar Speaker Output (-)

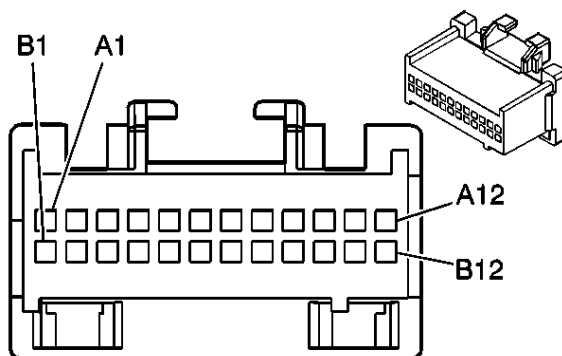

Connector Part Information		<ul style="list-style-type: none"> • 12110088 • 24-Way F Micro-Pack 100 Series (GRY) 	
Pin	Wire Color	Circuit No.	Function
A1	DK GRN	117	Right Front Speaker Output (-)
A2	LT GRN	200	Right Front Speaker Output (+)
A3	LT BLU	115	Right Rear Speaker Output (-)
A4	DK BLU	46	Right Rear Speaker Output (+)
A5	ORN	360	Amplifier Control
A6	PPL	1672	Gain Control Signal
A7-A8	--	--	Not Used
A9	LT GRN	1948	Right Front Low Level Audio Signal (-)
A10	LT GRN	512	Right Front Low Level Audio Signal (+)
A11	BLK	1946	Right Rear Low Level Audio Signal (-)
A12	DK BLU	546	Right Rear Low Level Audio Signal (+)
B1	GRY	118	Left Front Speaker Output (-)
B2	TAN	201	Left Front Speaker Output (+)
B3	YEL	116	Left Rear Speaker Output (-)
B4	BRN	199	Left Rear Speaker Output (+)
B5-B8	--	--	Not Used
B9	DK GRN	1947	Left Front Low Level Audio Signal (-)
B10	TAN	511	Left Front Low Level Audio Signal (+)
B11	BRN	1999	Left Rear Low Level Audio Signal (-)
B12	BRN	599	Left Rear Low Level Audio Signal (+)

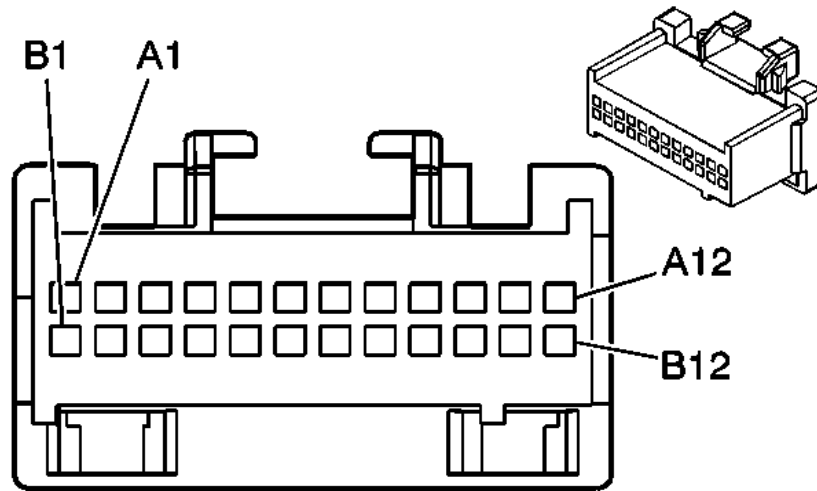


Audio Amplifier C-1 (Luxury)

Connector Part Information		<ul style="list-style-type: none"> 12110088 24-Way F Micro-Pack 100 Series (GRY) 	
Pin	Wire Color	Circuit No.	Function
A1	DK GRN	145	Amplifier Control
A2	ORN/BLK	1406	Remote Playback Device Left Audio Signal
A3	LT GRN	1407	Remote Playback Device Audio Common Signal
A4	LT BLU	1405	Remote Playback Device Right Audio Signal
A5	LT BLU	1960	Front Center Speaker Output (-)
A6	YEL	1860	Front Center Speaker Output (+)
A7	DK GRN	117	Right Front Speaker Output (-)
A8	LT GRN	200	Right Front Speaker Output (+)
A9	RED	1858	Left Rear Tweeter Speaker Output (+)
A10	PPL	1958	Left Rear Tweeter Speaker Output (-)
A11	GRY	118	Left Front Speaker Output (-)
A12	TAN	201	Left Front Speaker Output (+)
B1-B2	--	--	Not Used
B3	BARE	1574	Rear Audio Drain Wire (-)

B4	PPL	493	Rear Seat Audio Enable Signal
B5	TAN	511	Left Front Low Level Audio Signal (+)
B6	LT GRN	512	Right Front Low Level Audio Signal (+)
B7	BRN	599	Left Rear Low Level Audio Signal (+)
B8	DK BLU	546	Right Rear Low Level Audio Signal (+)
B9	LT GRN	1948	Right Front Low Level Audio Signal (-)
B10	DK GRN/ WHT	689	Rear Low Level Speaker Signal (-)
B11- B12	--	--	Not Used

Audio Amplifier C-2

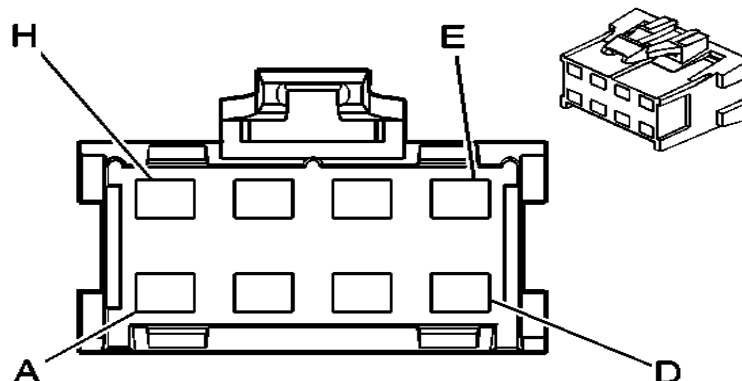


Connector Part Information

- 12110626
- 8-Way F Metri-Pack 280 Series Flexlock (GRY)

Pin	Wire Color	Circuit No.	Function
A	BLK	1250	Ground
B	YEL	116	Left Rear Speaker Output (-)
C	DK BLU/	346	Left Subwoofer Speaker Output (+)

	WHT		
D	DK BLU	46	Right Rear Speaker Output (+)
E	LT BLU	115	Right Rear Speaker Output (-)
F	LT GRN/ BLK	1794	Left Subwoofer Speaker Output (-)
G	BRN	199	Left Rear Speaker Output (+)
H	ORN	1940	Battery Positive Voltage


Remote Playback CD

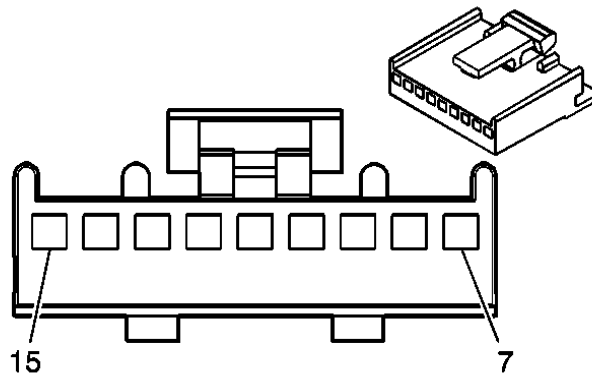

Connector Part Information		<ul style="list-style-type: none"> • 12064980 • 9-Way F Micro-Pack 100 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
7	PNK	314	Radio On Signal
8	GRY	8	Instrument Panel Lamp Supply Voltage - 1
9	BARE	2011	Drain Wire (Uplevel)
9	BARE	514	Ground (Luxury)
10	DK GRN/ WHT	368	Remote Playback Device Right Audio Signal
11	BRN/WHT	367	Remote Playback Device Left Audio Signal
12	BRN/WHT	372	Remote Playback Device Audio Common Signal
13	BLK	1850	Ground


14	DK GRN	835	Entertainment and Comfort Serial Data
15	ORN	340	Battery Positive Voltage

Rear Seat Audio(RSA) Do NOT Use

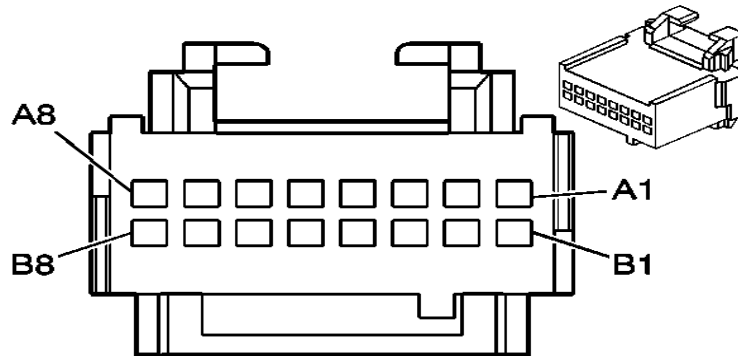


Connector Part Information		<ul style="list-style-type: none"> • 12110259 • 16-Way F Micro-Pack 100 Series (GRN) 	
Pin	Wire Color	Circuit No.	Function
A1	BLK	1946	Right Rear Low Level Audio Signal (-)
A2	DK BLU	546	Right Rear Low Level Audio Signal (+)
A3	BRN	1999	Left Rear Low Level Audio Signal (-)
A4	BRN	599	Left Rear Low Level Audio Signal (+)
A5	DK BLU	1796	Remote Radio Control Signal
A6-A7	--	--	Not Used
A8	DK GRN	1301	RAP Fuse Supply Voltage
B1	BLK	1946	Right Rear Low Level Audio Signal (-)
B2	DK BLU	546	Right Rear Low Level Audio Signal (+)
B3	BRN	1999	Left Rear Low Level Audio Signal (-)
B4	BRN	599	Left Rear Low Level Audio Signal (+)

B5	BLK/WHT	372	Remote Playback Device Audio Common Signal
B6	BLK	1850	Ground
B7	--	--	Not Used
B8	BRN	2409	Interior Park Lamps Supply Voltage

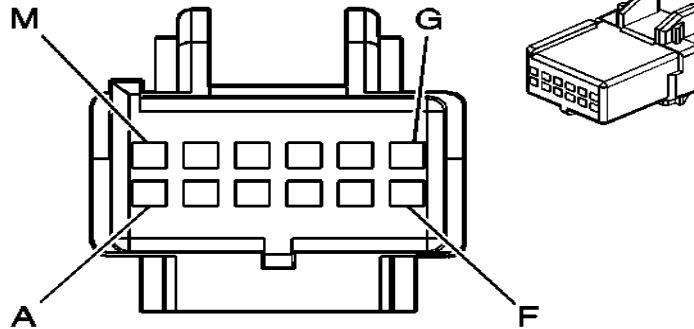


Connector Part Information		<ul style="list-style-type: none"> • 12064799 • 12-Way F Micro-Pack 100 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	DK GRN	1301	RAP Fuse Supply Voltage
B	BRN	2409	Interior Park Lamps Supply Voltage
C	BLK	1850	Ground
D	PPL	493	Rear Seat Audio Enable Signal
E-H	--	--	Not Used
J	LT BLU	1405	Remote Playback Device Right Audio Signal
K	LT GRN	1407	Remote Playback Device Audio Common Signal
L	ORN/BLK	1406	Remote Playback Device Left Audio Signal
M	PPL	1672	Gain Control Signal
Left Front Speaker			

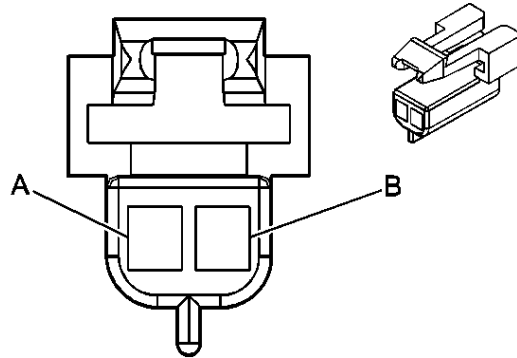

Connector Part Information		<ul style="list-style-type: none"> • 12186847 • 2-Way F Metri-Pack 150 Series (NAT) 	
Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-)
B	TAN	201	Left Front Speaker Output (+)


Right Front Speaker

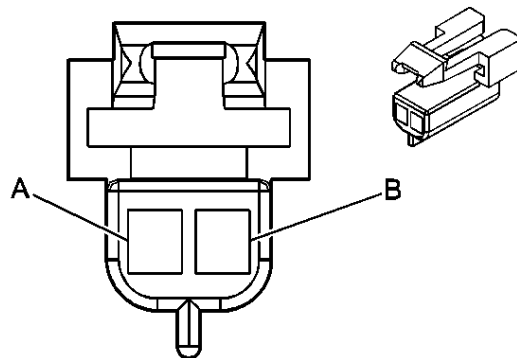

Connector Part Information		<ul style="list-style-type: none"> • 12186847 • 2-Way F Metri-Pack 150 Series (NAT) 	
Pin	Wire Color	Circuit No.	Function
A	DK GRN	117	Right Front Speaker Output (-)


B	LT GRN	200	Right Front Speaker Output (+)
---	--------	-----	--------------------------------

Speaker - Left Console Tweeter (Luxury)

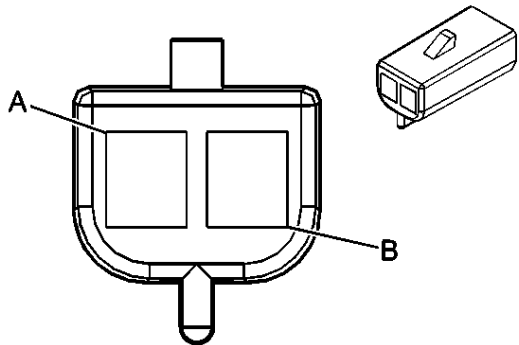


Connector Part Information		<ul style="list-style-type: none"> • 12059253 • 2-Way F M/P 150 (LT GRN) 	
Pin	Wire Color	Circuit No.	Function
A	LT BLU	1960	Front Center Speaker Output (-)
B	YEL	1860	Front Center Speaker Output (+)

Speaker - Right Console Tweeter (Luxury)

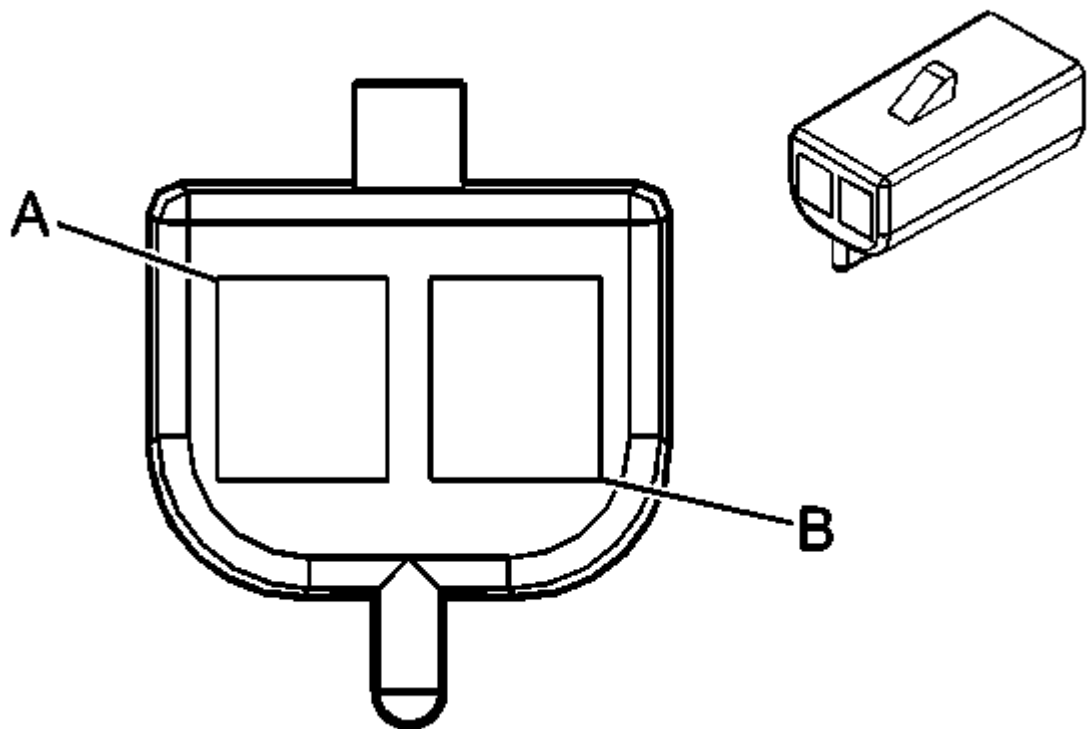


Connector Part Information		<ul style="list-style-type: none"> • 12059253 • 2-Way F M/P 150 (LT GRN) 	
Pin	Wire Color	Circuit No.	Function
A	LT BLU	1960	Front Center Speaker Output (-)
B	YEL	1860	Front Center Speaker Output (+)

Speaker - Left A Pillar Tweeter (Luxury)

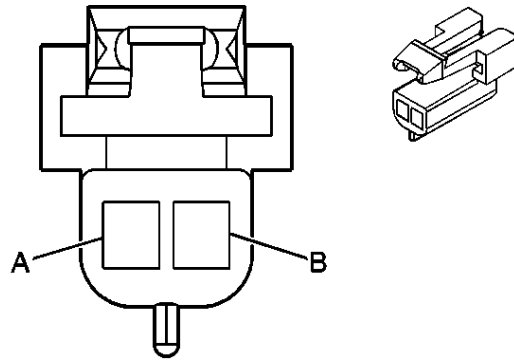

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-)
B	TAN	201	Left Front Speaker Output (+)


Speaker - Right A Pillar Tweeter (Luxury)

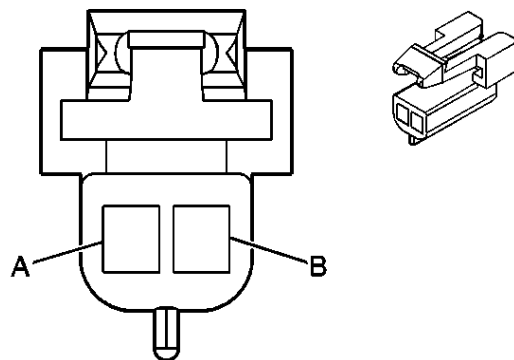

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit	Function


		No.	
A	DK GRN	117	Right Front Speaker Output (-)
B	LT GRN	200	Right Front Speaker Output (+)

Speaker - LF Door

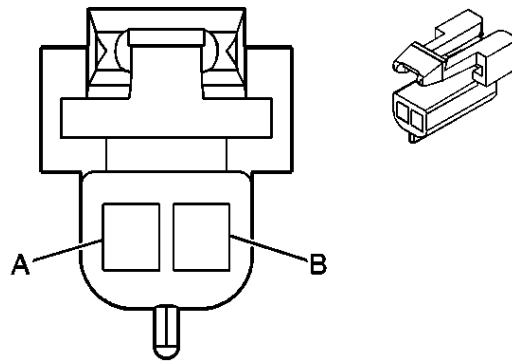


Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-)
B	TAN	201	Left Front Speaker Output (+)

Speaker - LR Door

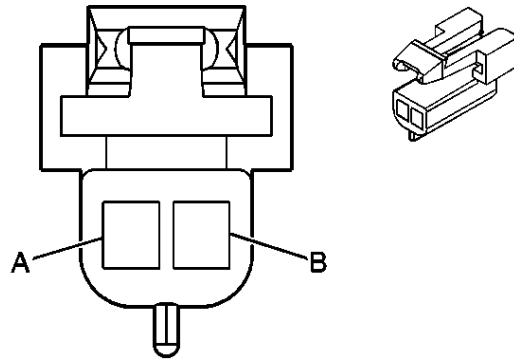

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)


Speaker - RR Door

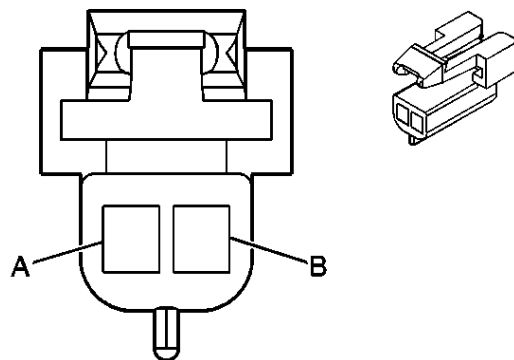

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit	Function


		No.	
A	LT BLU	115	Right Rear Speaker Output (-)
B	DK BLU	46	Right Rear Speaker Output (+)

Speaker - Left D Pillar Twiddler (Luxury)

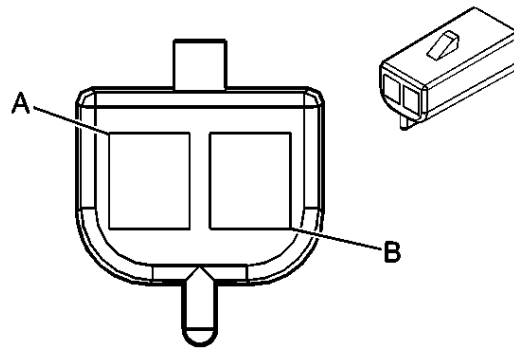


Connector Part Information		<ul style="list-style-type: none"> • 12059253 • 2-Way F M/P 150 (LT GRN) 	
Pin	Wire Color	Circuit No.	Function
A	PPL	1958	Left Rear Tweeter Speaker Output (-)
B	RED	1858	Left Rear Tweeter Speaker Output (+)

Speaker - Right D Pillar Twiddler (Luxury)

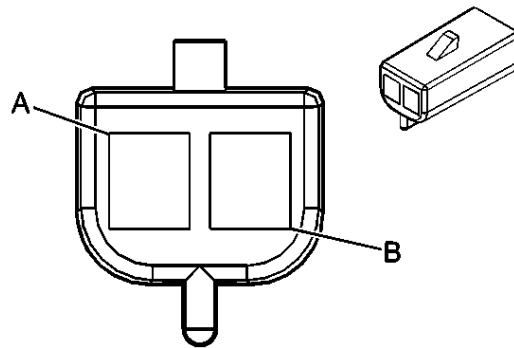

Connector Part Information		<ul style="list-style-type: none"> • 12059253 • 2-Way F M/P 150 (LT GRN) 	
Pin	Wire Color	Circuit No.	Function
A	PPL	1958	Left Rear Tweeter Speaker Output (-)
B	RED	1858	Left Rear Tweeter Speaker Output (+)



Speaker - Left D Pillar

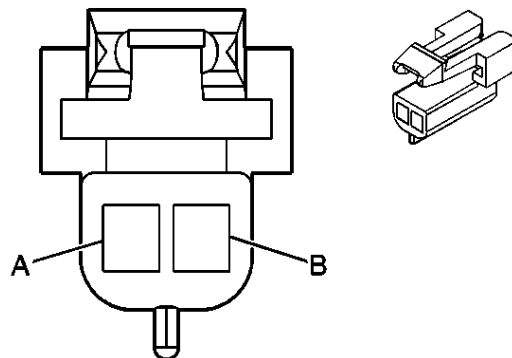

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function


A	LT BLU/ BLK	315	Left D Pillar Speaker Output (-)
B	PNK	2305	D Pillar Speaker Common

Speaker - Right D Pillar

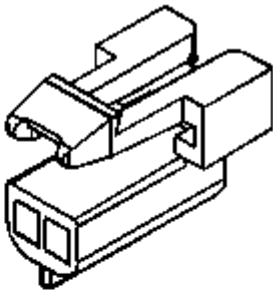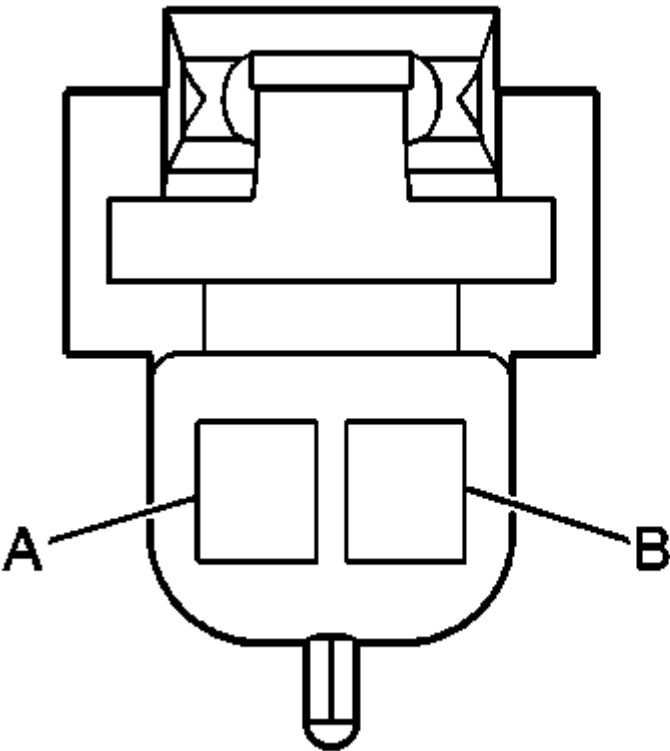

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	PNK	2305	Speaker - Series Connection
B	DK GRN	1795	Right D Pillar Speaker Common

Speaker - Subwoofer

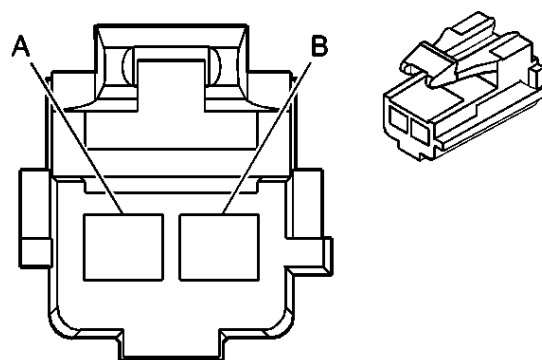

Connector Part Information		<ul style="list-style-type: none"> • 12129081 • 2-Way F Metri-Pack 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	LT GRN/ BLK	1794	Left Rear Subwoofer Speaker Output (-)
B	DK BLU/ WHT	346	Left Subwoofer Speaker Output (+)