


**POWER
DISTRIBUTION
CENTER**

FROM
FUSE
10 (PDC)

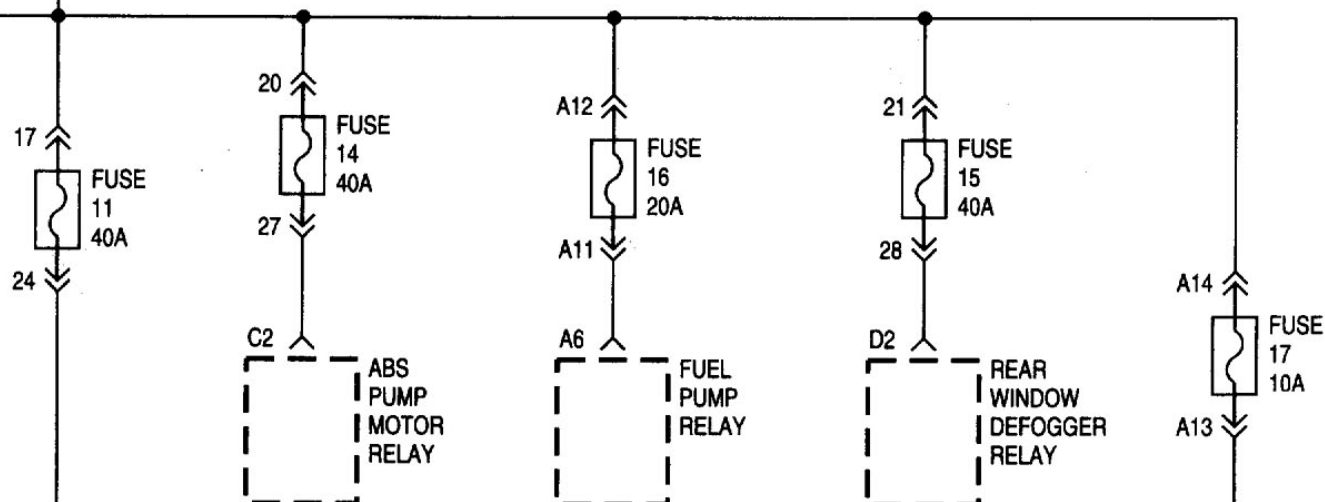

A111
12
RD/LB
↓
**TO
BLOWER
MOTOR
RELAY**





M1
20
PK/WT
↓
**TO
C108**

FROM
**ABS
DIODE**

B48
20
RD/YL


FROM
S101


A142
14
DG/PK

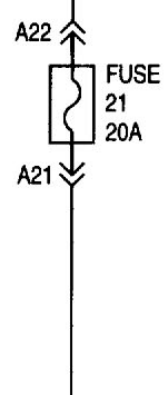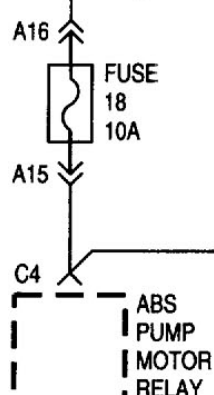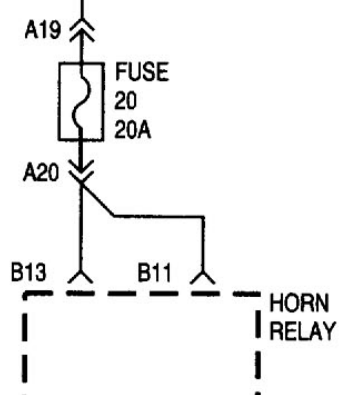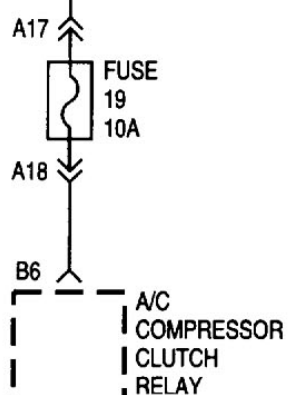


B47
14
RD/LB
↓
**TO
S114**

F142
18
OR/DG
↓
**TO
C103**

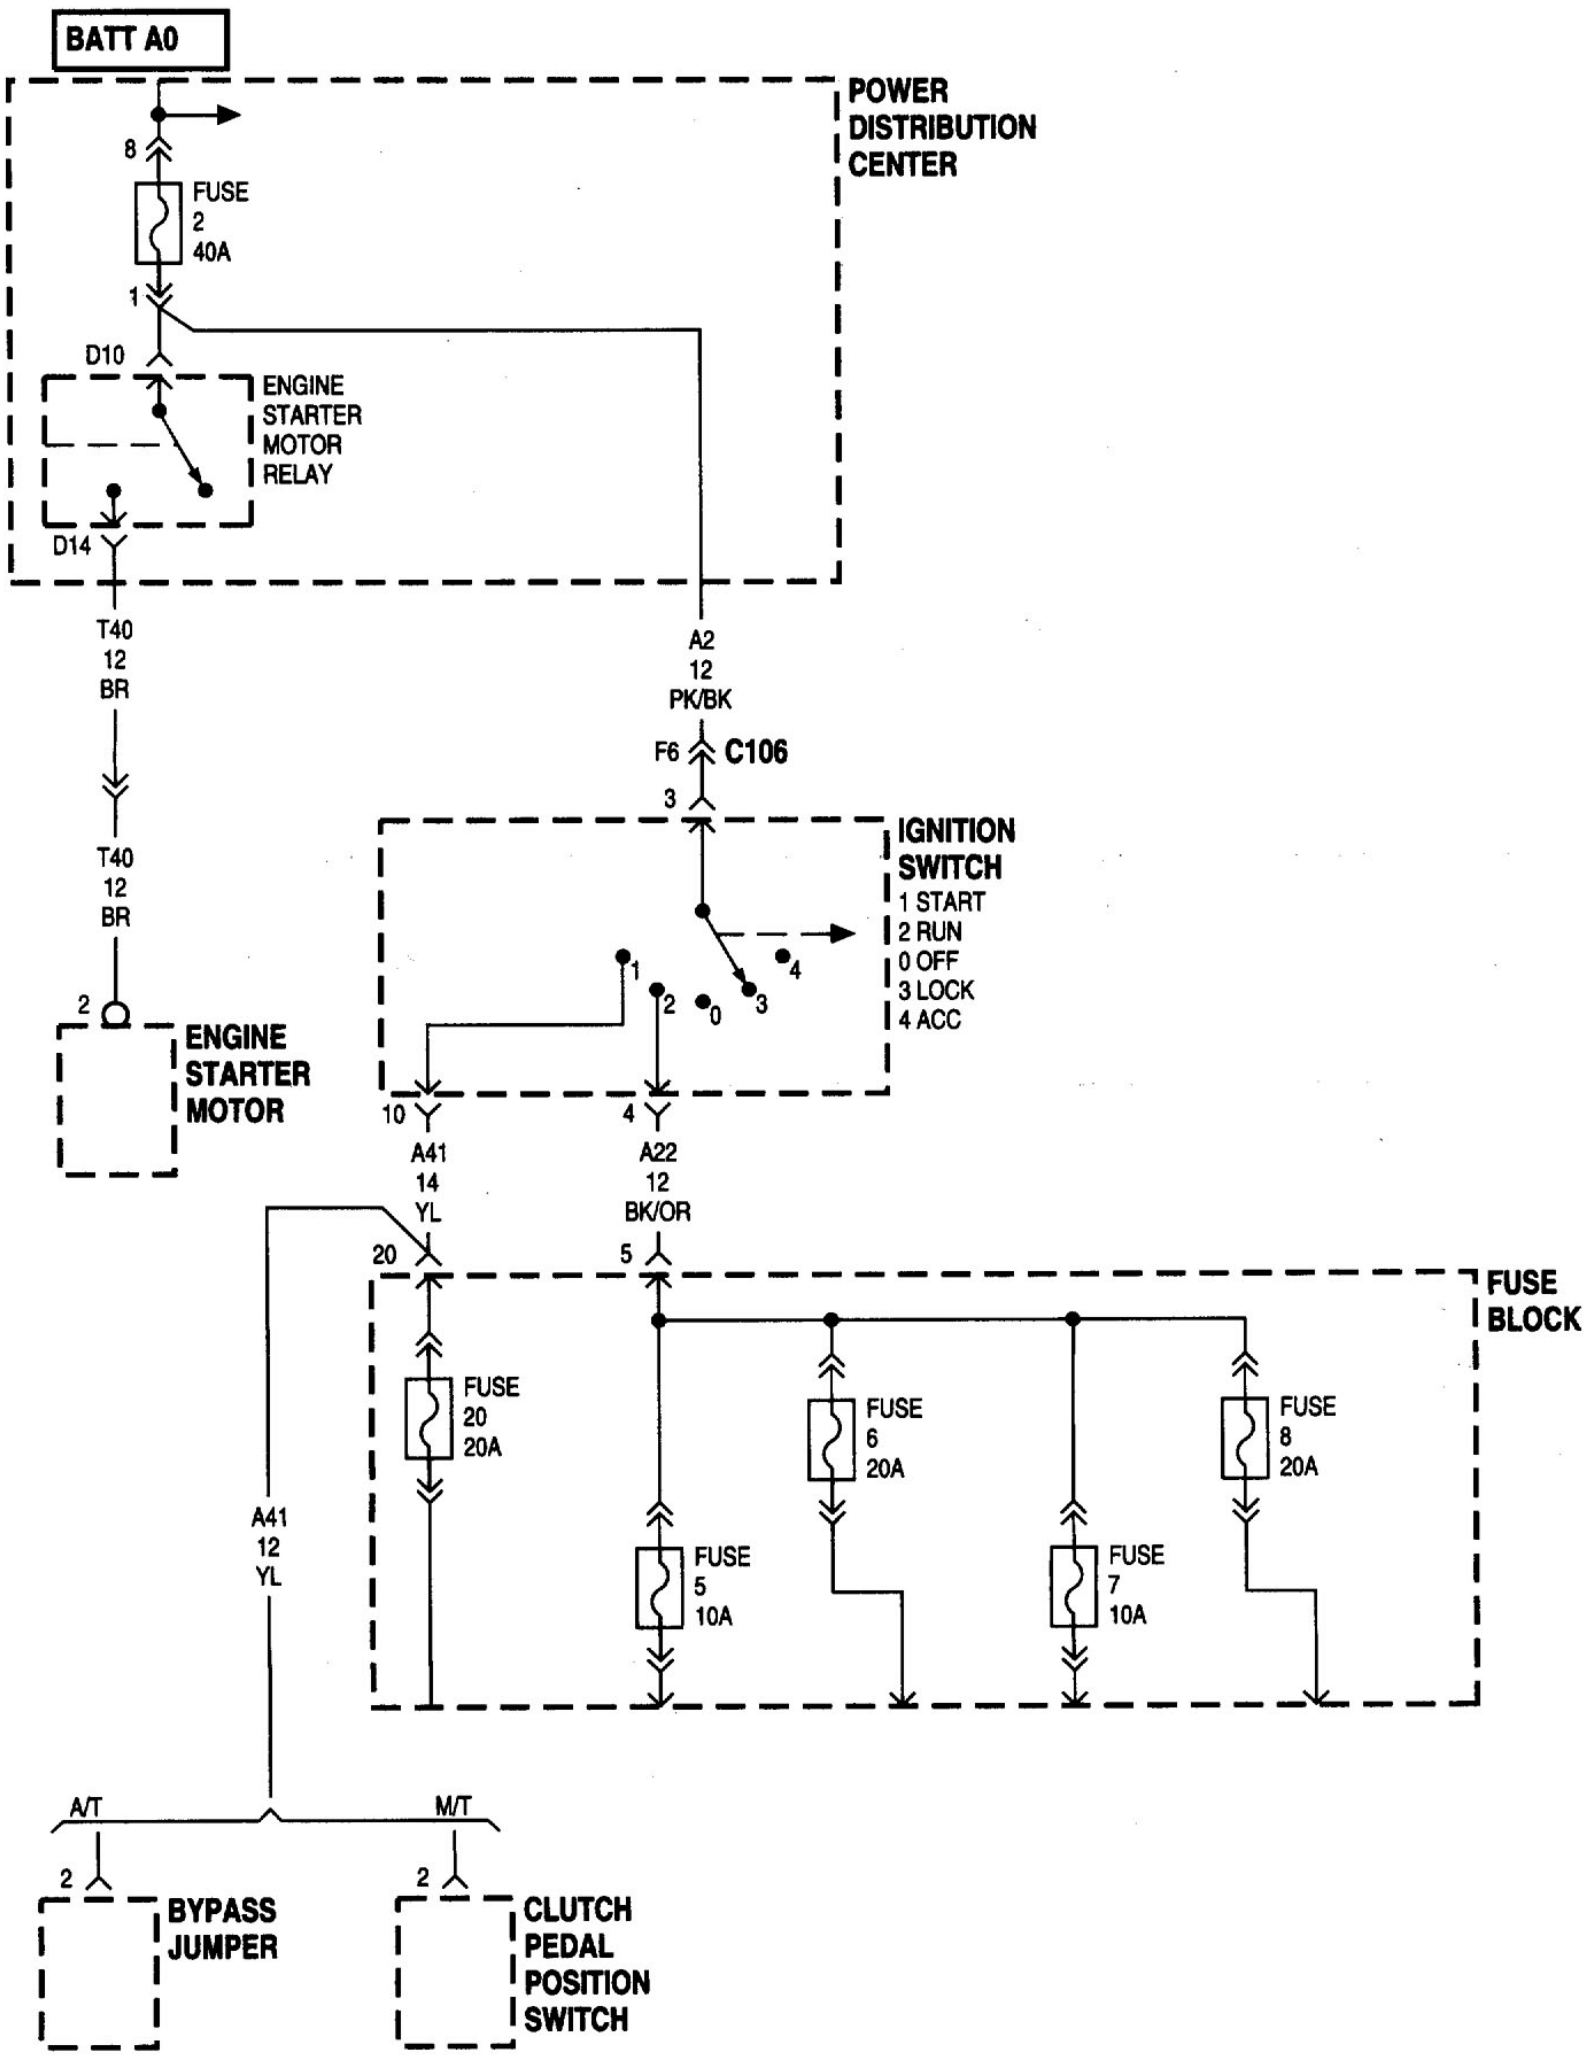


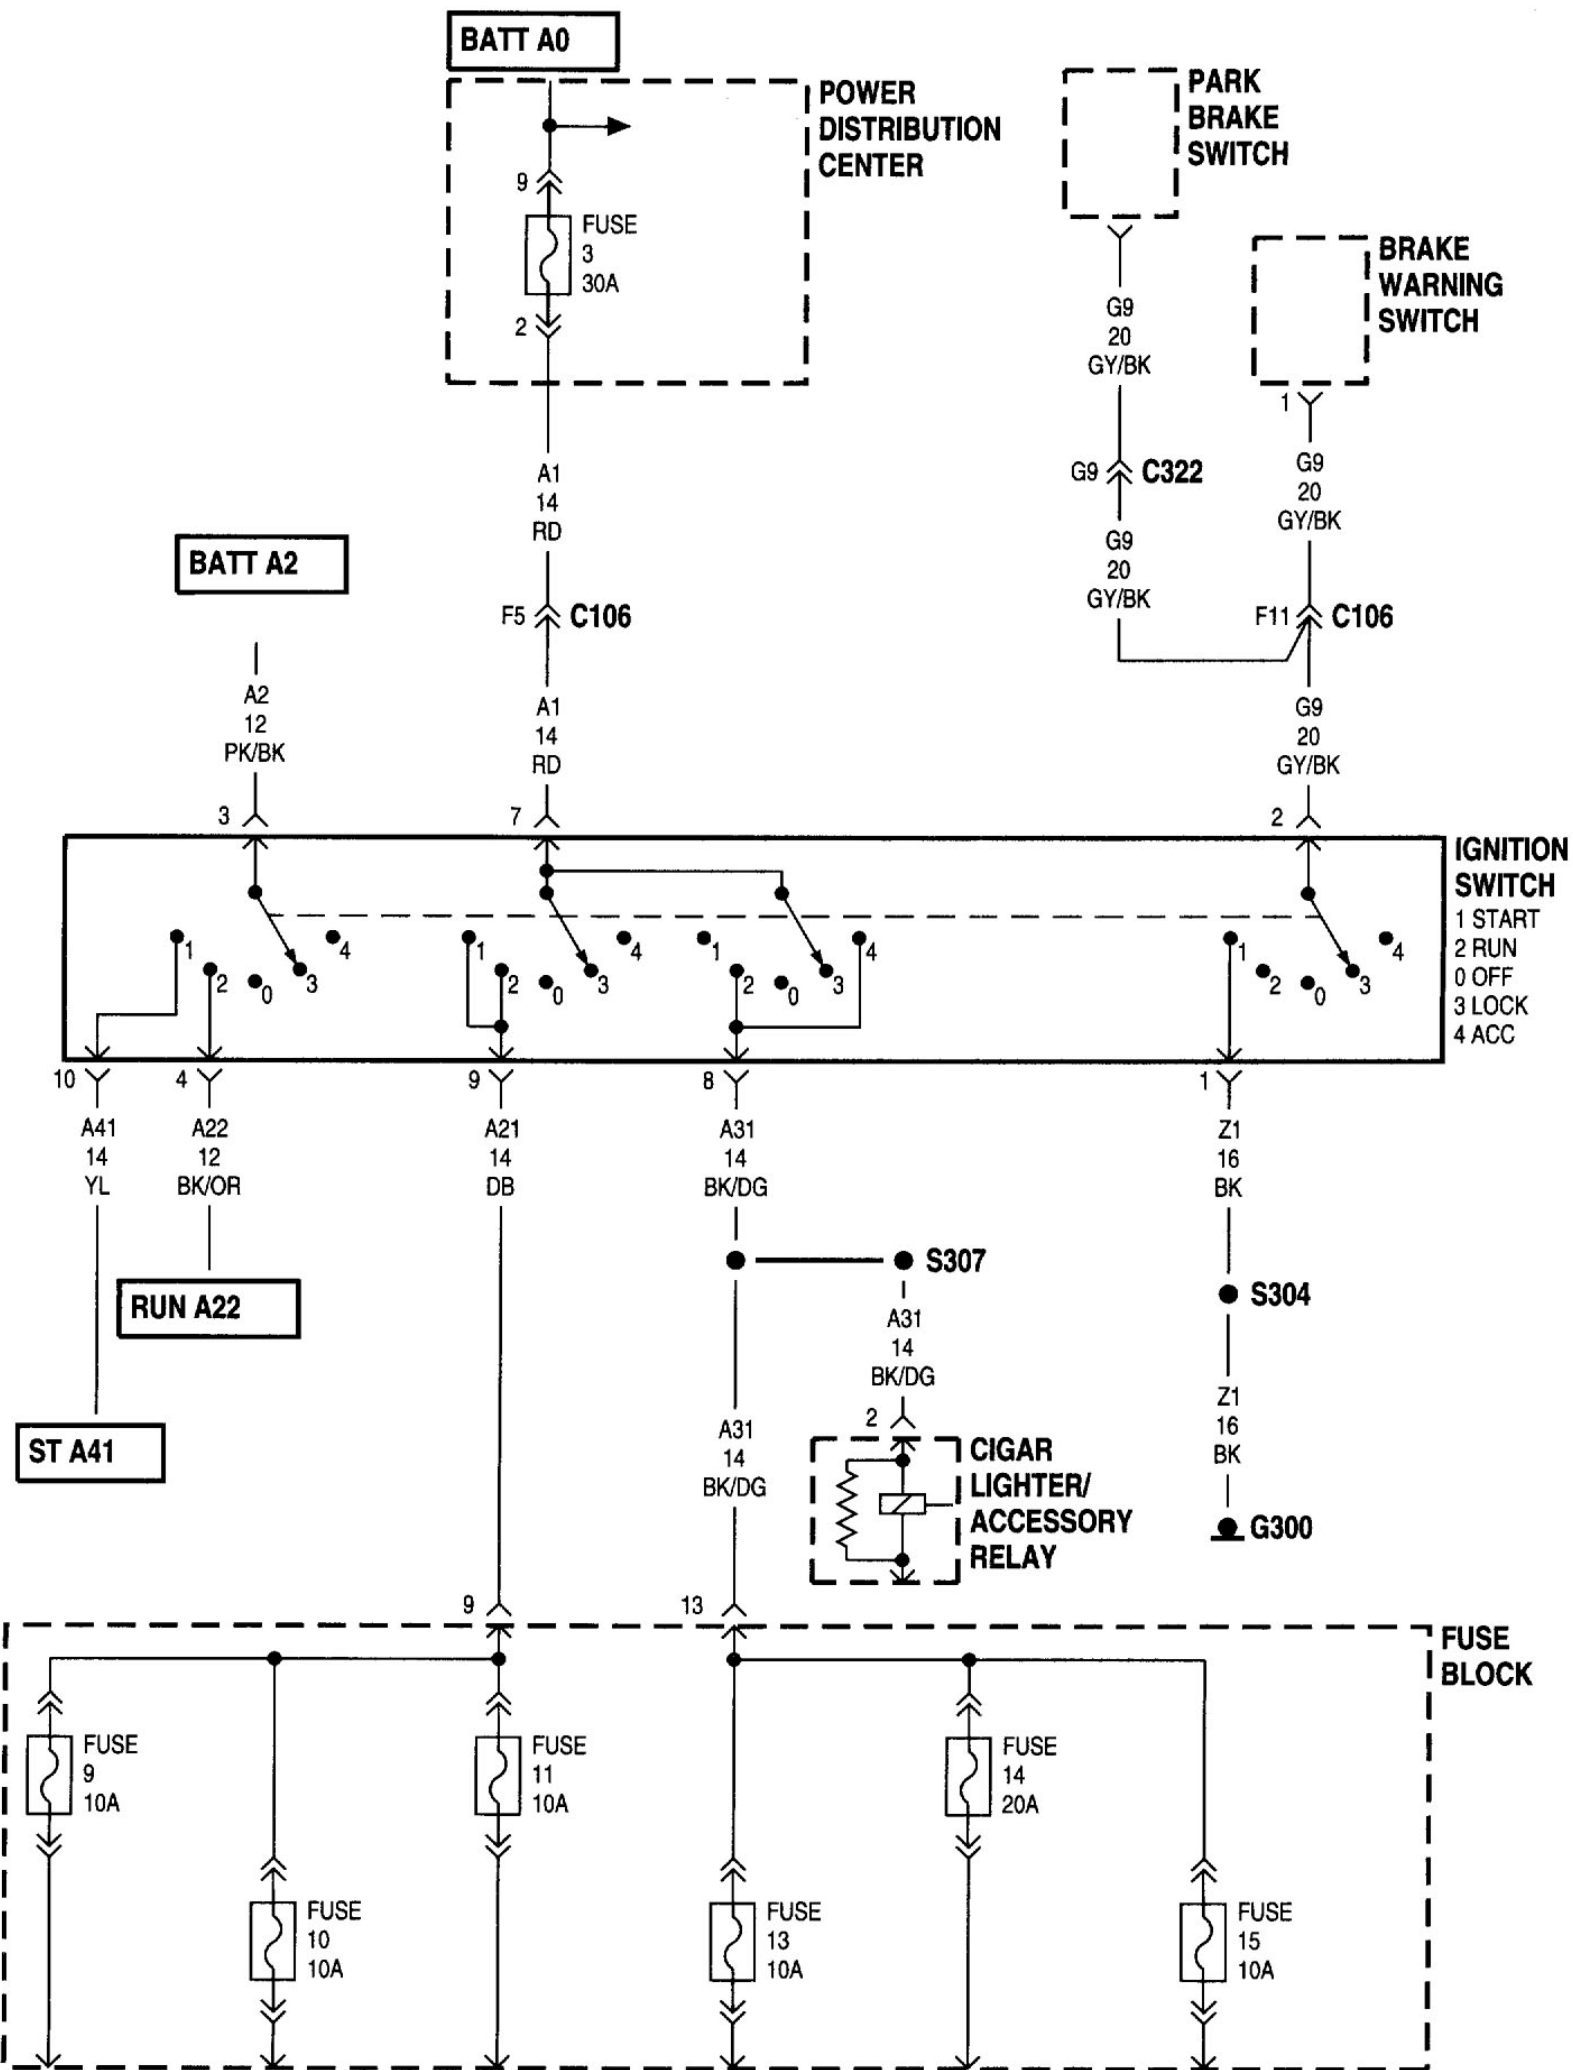

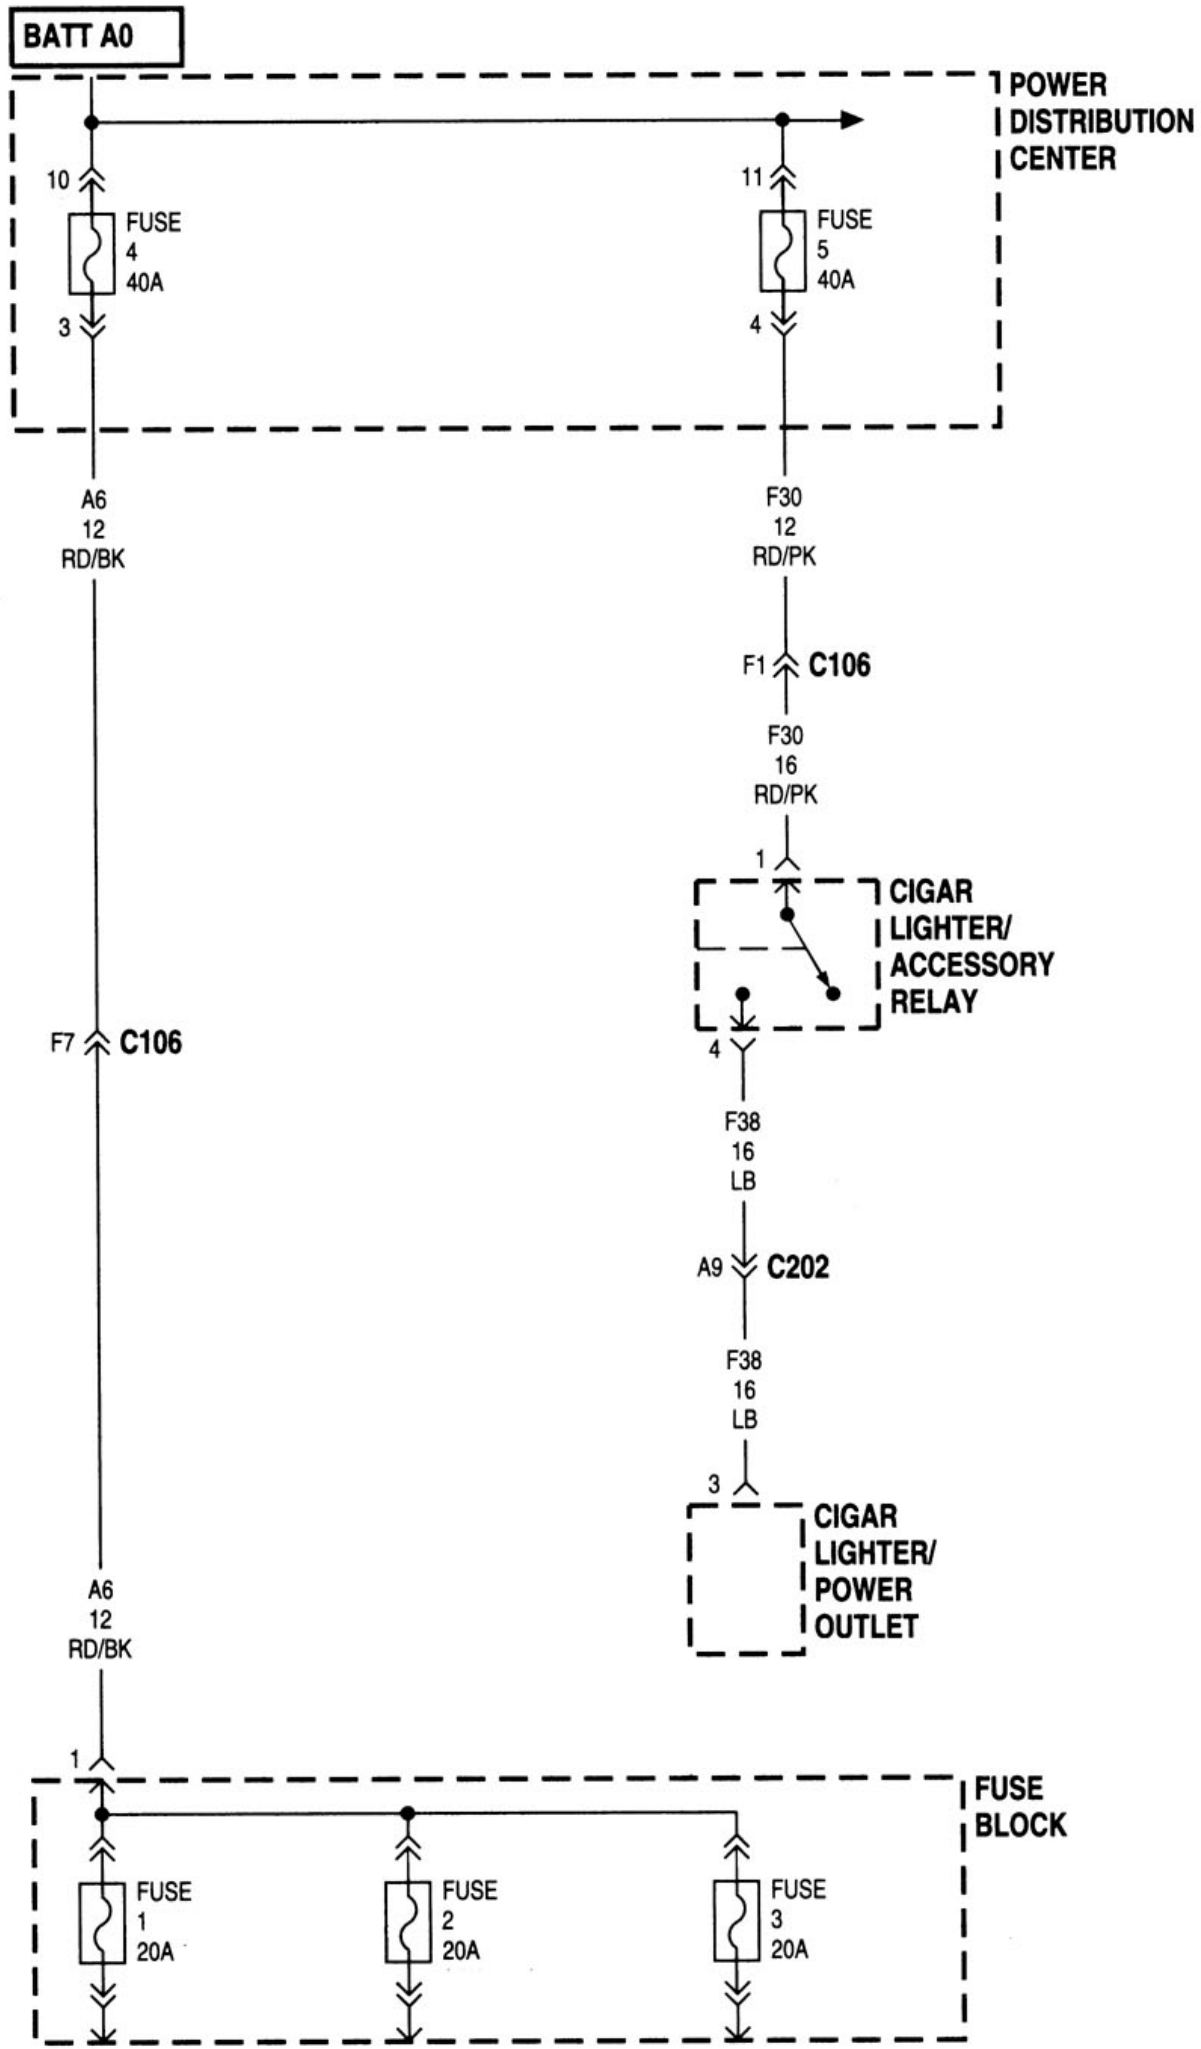

BATT A0


**POWER
DISTRIBUTION
CENTER**

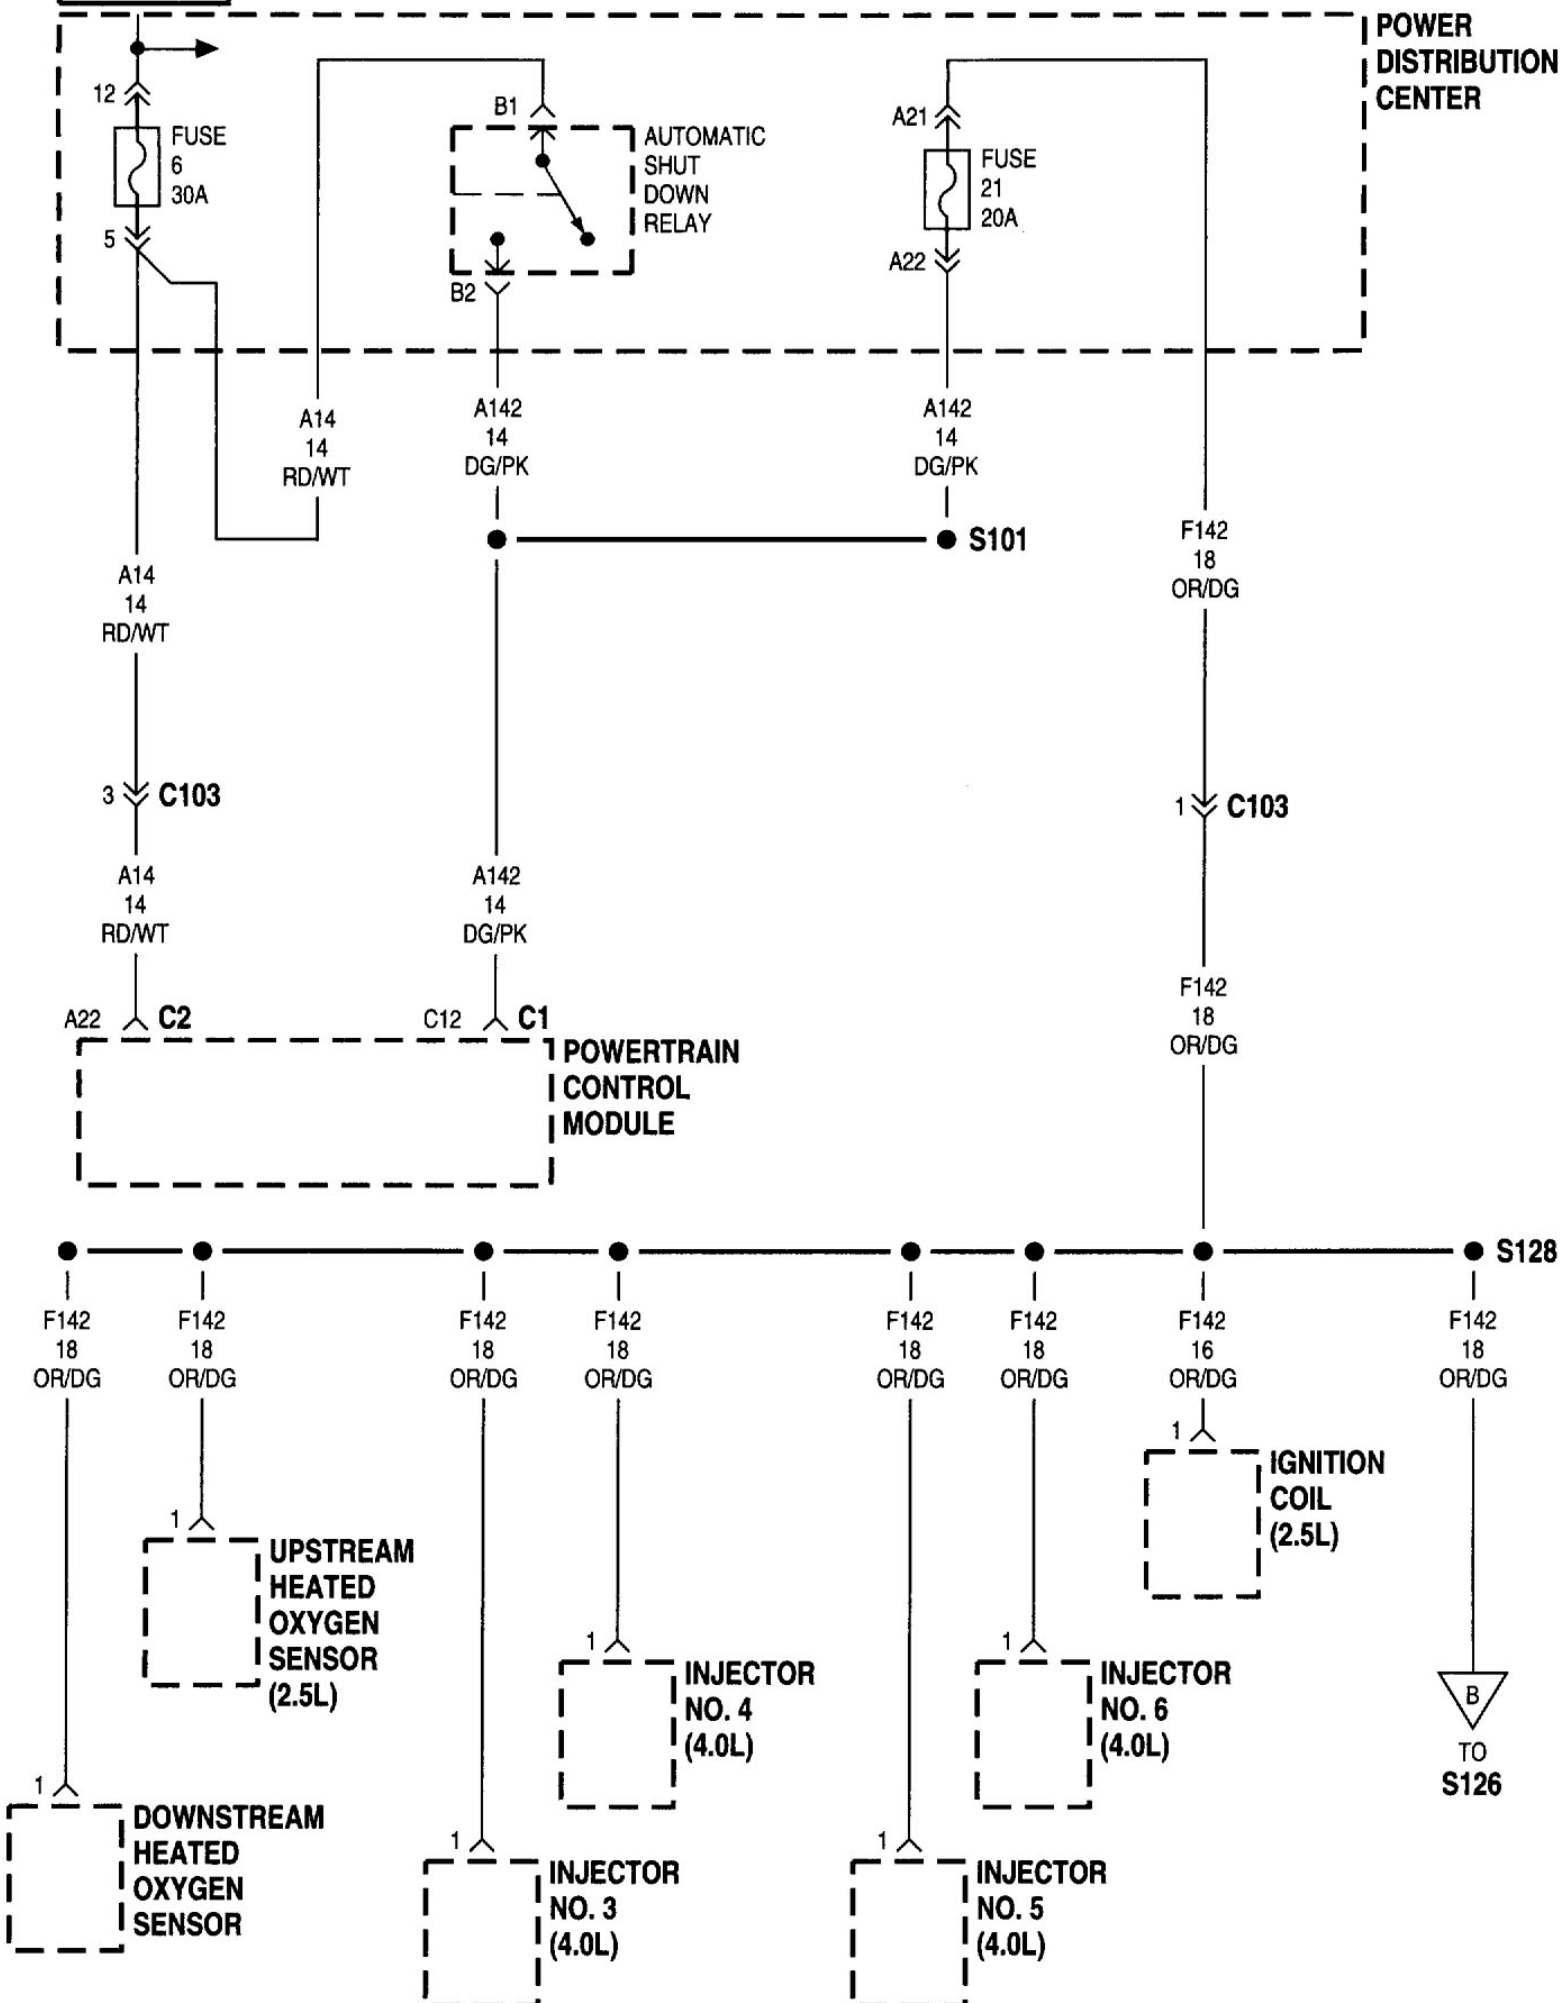


FROM
S128



F142
18
OR/DG

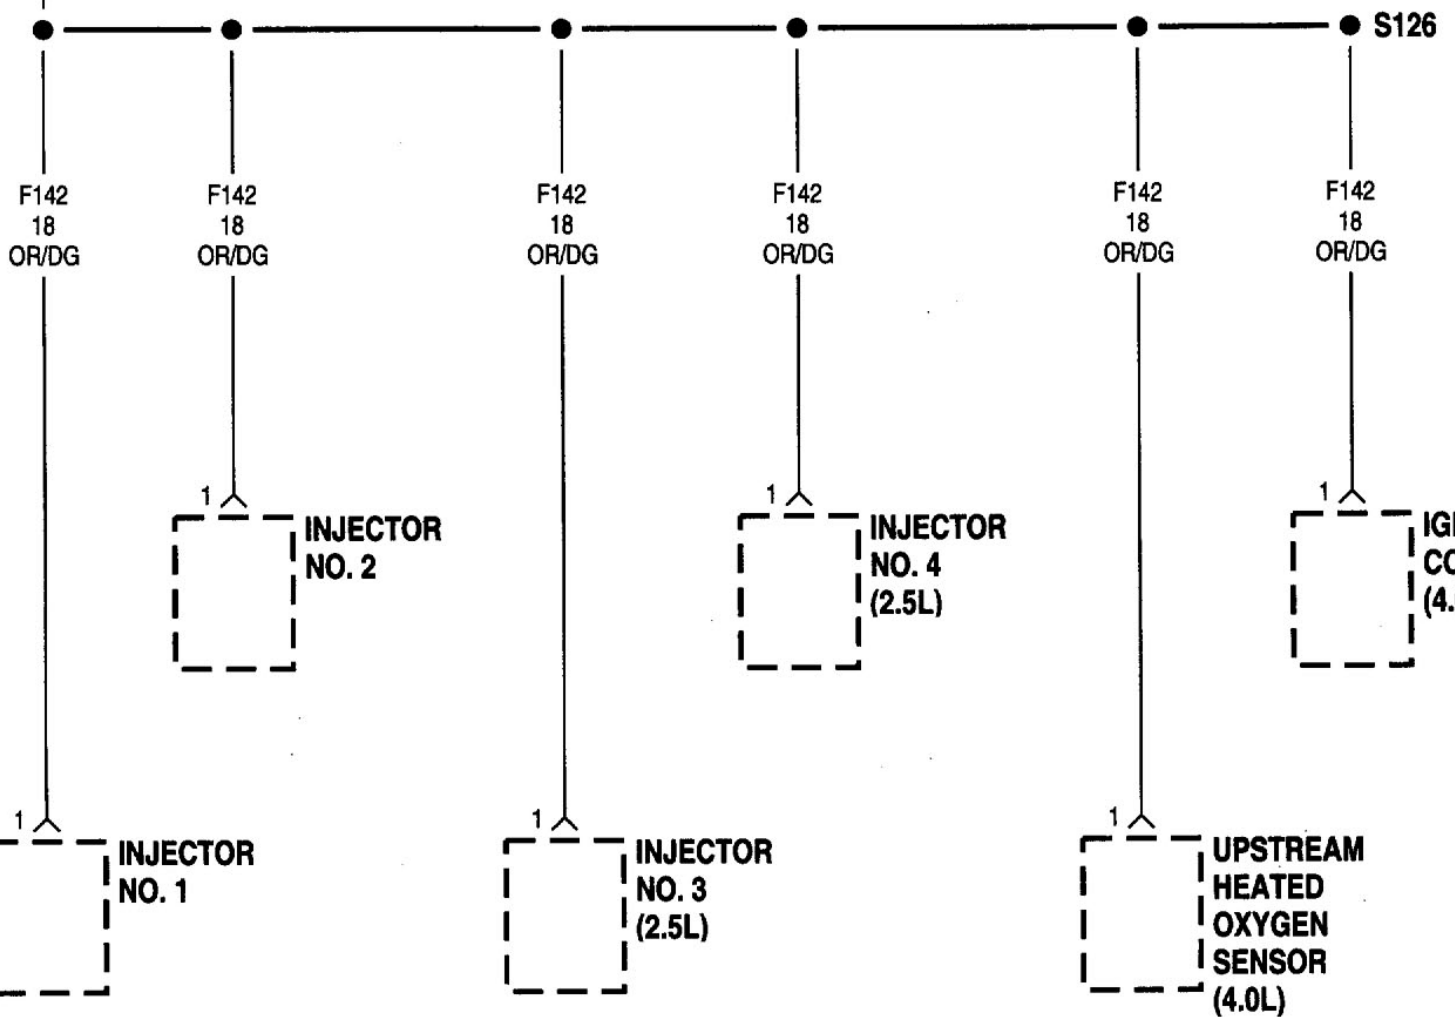

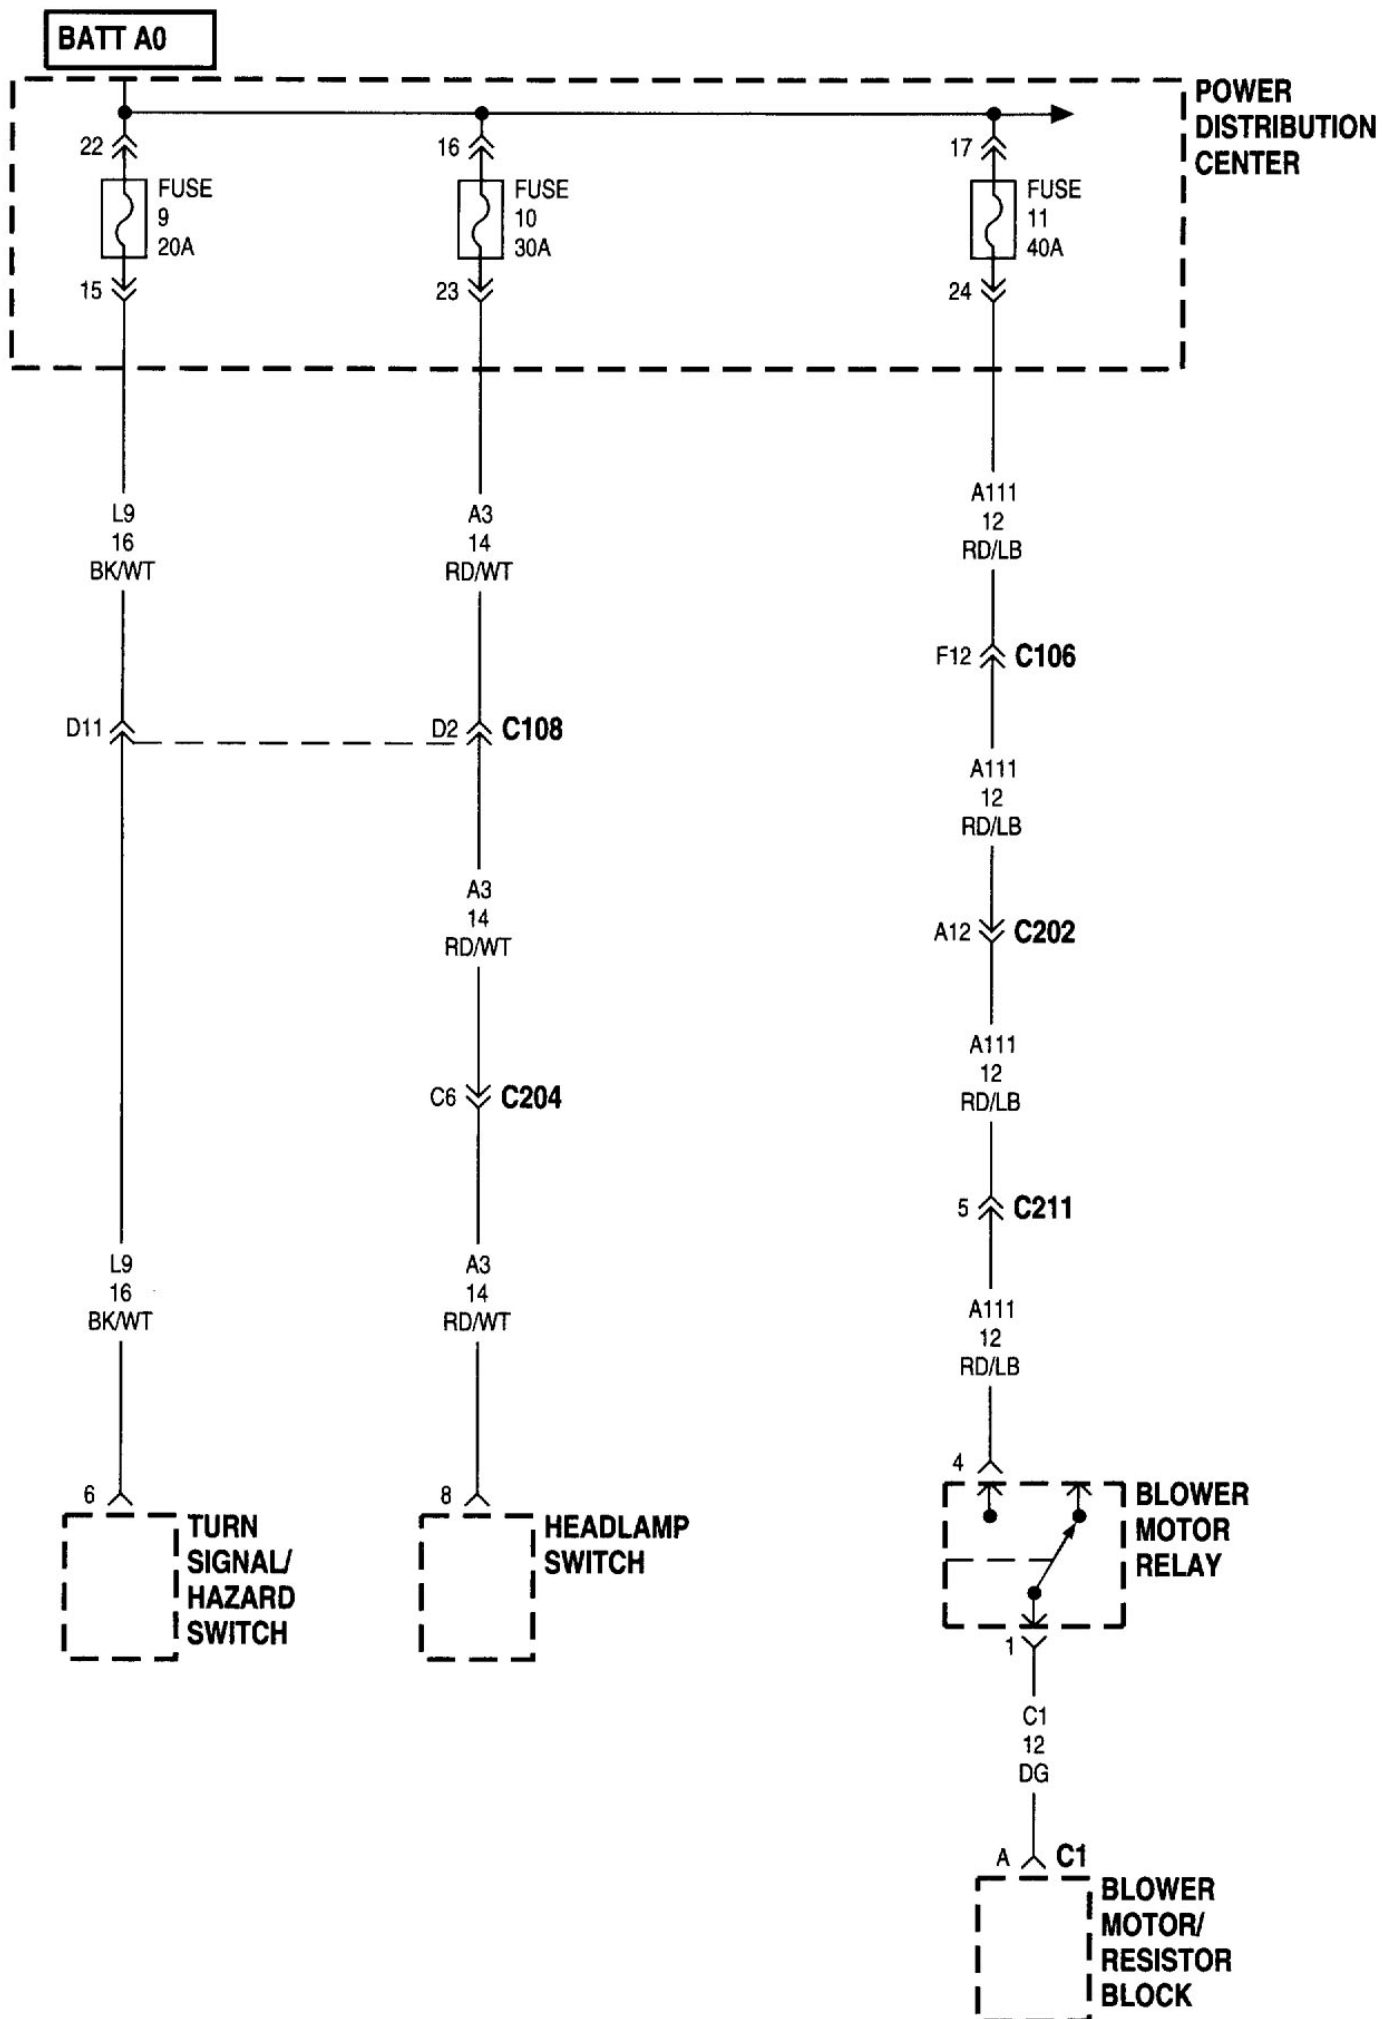

BATT A0

**POWER
DISTRIBUTION
CENTER**

21

FUSE
15
40A

28

D2

REAR
WINDOW
DEFOGGER
RELAY

D8

C15

12

BK/WT

F8

C106

C15

12

BK/WT

S320

C15

12

BK/WT

17

FUSE
BLOCK

FUSE
17
10A

37

F81

20

DB/RD

A5

C202

F81

20

DB/RD

3

REAR
WINDOW
DEFOGGER
SWITCH
(HARD TOP)

A12

FUSE
16
20A

A11

A6

FUEL
PUMP
RELAY

A7

A141

18

DG/WT

7

C103

A141

18

DG/WT

1

FUEL
PUMP
MODULE

H1

C323

C15

12

BK/WT

1

C326

C15

12

BK/WT

C15

12

GY

REAR
WINDOW
DEFOGGER
(HARD TOP)

